

C LUX




1. INTRODUCTION

This guide provides information on how to use the product functions to get the full effect and benefits of C LUX led light, as well as warnings on its use. For your own safety, please read and follow all safety instructions and warnings. The manufacturer disclaims liability for any damage to persons or property caused by inappropriate operation, damage of this kind lies in the responsibility of the operator.

2. SAFETY PRECAUTIONS


- ① Please read the following operating instructions very carefully, before using this fixture for the first time.
- ② The lamp head emits heat through its vent holes and the housing surface can reach a temperature around 60 °C.
Do not attempt to open any of the device or component housings. To reduce the risk of electric shock, do not remove lamp head cover. No user-serviceable parts are inside. Maintenance and repair work to be carried out only by authorized Service Centre.
- ③ Do not store or use under humid or moist conditions for an extended amount of time. Avoid storing the lam where corrosive chemicals are.
- ④ Do not cover the vent holes while using it. Proper ventilation must be provided. Avoid exposing the lamp head to the heat radiation of other light fixtures.
- ⑤ Keep this equipment out of reach of children.

3. COMPONENTS AND ACCESSORIES

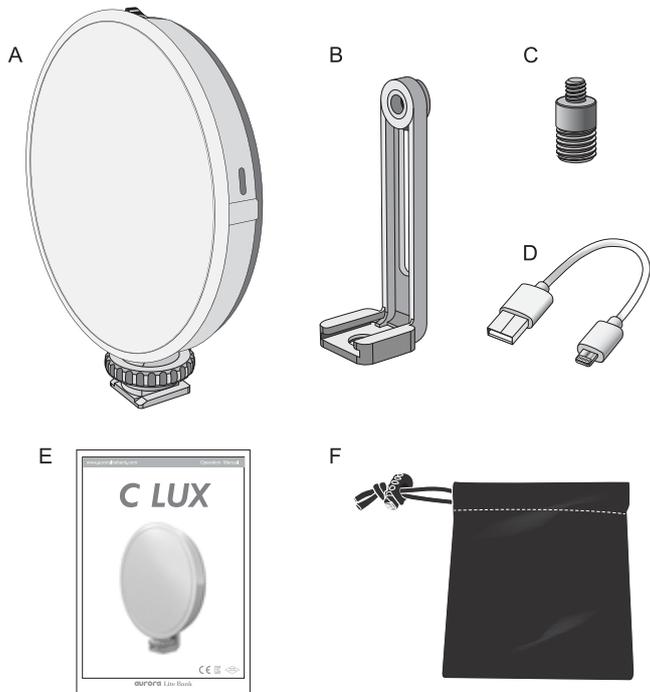


- A. C Lux light
- B. L bracket for indirect positioning of a light inside Firefly Beauty Box
- C. Joint screw for direct positioning of a light inside Firefly Beauty Box
- D. USB charging cable
- E. Operation manual
- F. Carrying bag

4. INSTALLATION

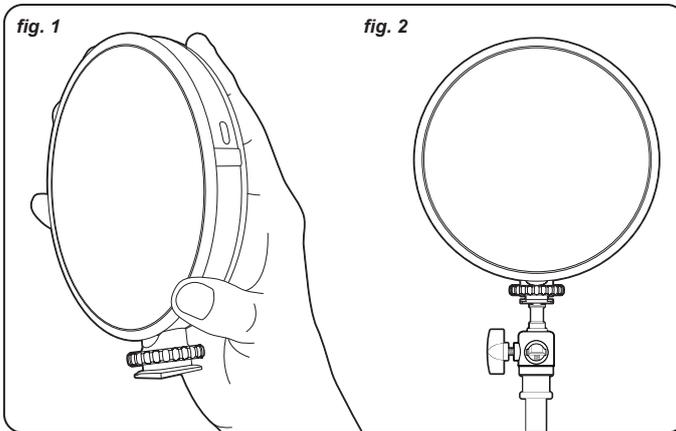

To use off camera, you can hold it with hand or place it on to a tripod or light stand with 1/4" screw tap. fig.1,2

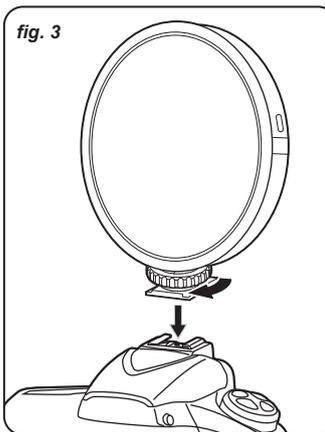

To use C Lux with shoe mounted camera, install the light onto a hot shoe adaptor and fasten thumbscrew tightly.

For use with Firefly Beauty Box, either direct mount or indirect mount is possible.

Direct mount

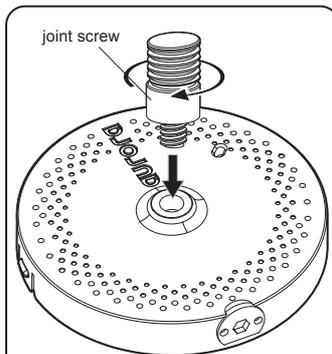


fig. 4
Attach joint screw in to C Lux light.

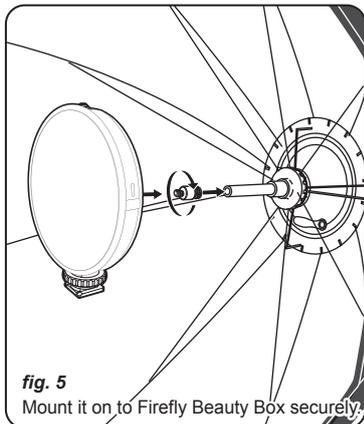


fig. 5
Mount it on to Firefly Beauty Box securely.

Indirect mount

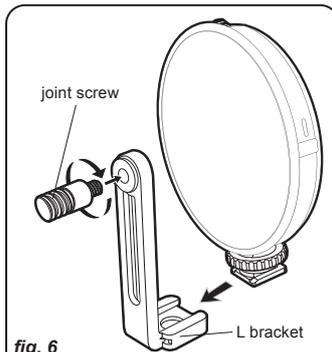


fig. 6
Slide L bracket in cold shoe and fix it with thumbscrew and then attach a joint screw in to L bracket.

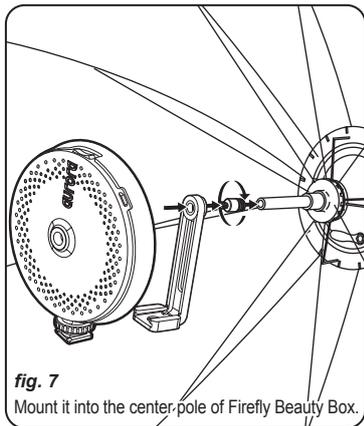


fig. 7
Mount it into the center-pole of Firefly Beauty Box.

5. OPERATING INSTRUCTIONS

1.Charge

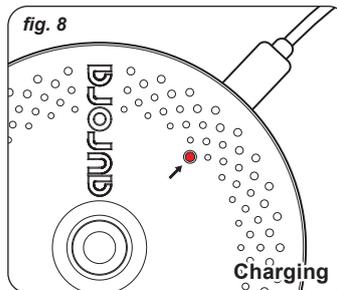


fig. 8

Charging

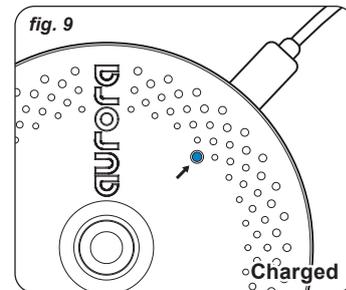


fig. 9

Charged

For charging, connect a USB cable included with C Lux and charge through USB port. Red indicator will turn on while charging and light blue when fully charged. fig 7,8

2.Power Control



- is to turn off the unit.
- ||** is to turn on the unit at 50% of power.
- |** is to turn on the unit at full power.

3.Specifications

Power consumption	10W		
CRI	>95Ra		
Intensity (Lux)	0.3 meter	0.5 meter	1 meter
	2405 Lux	925 Lux	223 Lux
Power adjust	Off , 50% , 100%		
Beam angle	120°		
Battery capacity	Li-ion battery 3.7V 950 mAh x 2		
Recharging time (from empty battery)	1hr 40min		
Running time	1 hr at max power		
Dimension	Ø11cm		
Weight	0.15kg		

6. WARRANTY

C Lux is guaranteed to be free from defects in workmanship and parts and carries a two year warranty period from the date of purchase. Defects that occur within this warranty period, under normal use and care will be repaired or replaced at Aurora Lite Bank discretion, solely at our option with no charge for parts or labour. In the event of the equipment malfunction, contact the dealer from whom you purchased the product.

Please note, that you will be not be reimbursed for the cost of bringing the equipment to us or to our authorized dealers or to our service center. Aurora Lite Bank reserves the right to replace the product or relevant part with the same or equivalent product or part, rather than repair it. Where a replacement is provided the products or part replaced becomes the property of Aurora Lite Bank.

This warranty does not cover any damage resulting from:

- Failure to follow the instructions in the instruction manual;
- Repair, modification or overhaul not conducted by any Aurora authorized or approved personnel.
- Fire, natural disaster, act of God, lightning, abnormal voltage, etc;
- Submergence in water (flooding), exposure to alcohol or other beverages, infiltration of sand or mud, physical shock, or dropping of the equipment and other unnatural causes.

This warranty is limited to C Lux light not to the accessories, nor does it apply to other consumables provided.

Any consequential damages arising from failure of the equipment, such as expenses incurred in taking pictures or recording images or loss of expected profit, will not be reimbursed, whether they occur during the warranty period or not. Parts essential to the servicing of the light equipment (that is, components required to maintain the functions and quality of the fixture) will be available for a period of five years after the product is discontinued.



AURORA
Lite Bank



Address

123 Secheonro 3-gil, Dasa-up,
Dalseong-gun, Daegu 42921
Republic of Korea



Phone & Fax

Tel. + 82 53 384 9874
Fax. + 82 53 384 9886



Info

www.alb.co.kr
alb@alb.co.kr

Made in Korea